

## Bosch 4112

Zones - 8 to 16, all Hardwired

Battery - 12 volt rechargeable Gel-Cell inside main panel

AC Transformer is 16.5 volts, screwed into outlet somewhere in house

Wireless - No

Downloadable - Call Tech Support

Panic Panic - COMMAND + 9 (This may be silent on some systems)

Special Alert - COMMAND + 7 (sends specific alarm (Optional))

Arm Away - Enter Code + ENT key or COMMAND + 1 (All zone lights must be Off to arm)

Stay Arm - COMMAND + 3 (Motions are bypassed, doors/windows will still be delayed)

Instant Arm - COMMAND + 2 (Perimeter & Instant lights turn on, Motions will not arm)

Partial Arm - COMMAND + 8 (Arms all but open zones, bypasses motions)

Disarm - Enter Code + ENT key (Perimeter, Interior, Instant turn off)

Reset Alarm - Press COMMAND + 4 to stop keypad flashing and reset system

*code & enter    code & escape*

*Command 441*

Reset Smoke - COMMAND + 4 + 7

(If this does not work power down system and set for service)

Bypass - 1. Arm system with COMMAND + 1

2. Before Exit Delay expires press COMMAND + 0

3. Press zone to be bypassed (1, 2, 3 etc) + ENT key

4. Press ENT to end and allow system to finish arming

(Bypassed zones will flash slowly on display)

Force Bypass - 1. Open door or window

2. Arm system with either User Code + ENT or  
COMMAND + 1, 2 or 3)

3. Keypad beeps indicating Zone is open

4. Press COMMAND + ENT to force bypass

(A forced bypassed zone may arm with rest of system if closed)

Door Chimes - COMMAND + 6 to turn On or Off

Alarm Memory - There is no Alarm Memory

Phone Test - COMMAND + 4 + 1 (If Phone test good system sounds 2 second tone)

System Test - COMMAND + 4 + 4 (Press any key to end test)