

Ademco 4110 Vantage / First Alert 100C

Zones - 6 Hardwired

Battery - 12 volt rechargeable Gel-Cell inside main panel

AC Transformer is 16.5 volts, screwed into outlet somewhere in house

Wireless - No

Downloadable - Yes, use Code + # + 1 to send, it cannot be called into

Panic Buttons - Police Panic - \* and #

Status - Press \* if keypad shows NOT READY to view open zones

Arm AWAY - 4-digit code + 2 (AWAY)

Arm STAY - 4-digit code + 3 (STAY)

Instant Arm - 4 digit code + 7 (INSTANT)

Max Arming - 4-digit code + 4 (MAX), arms everything including motions instant

Quick-Arm (If Enabled) Press # + 2 for AWAY, # + 3 for STAY

Disarm - 4 digit code + 1 (OFF)

Silence Alarm - 4 digit code + 1 (OFF) twice to turn off siren and reset display

Bypass - 4-digit code + 6 (BYPASS) + zone (01, 02 etc), BYPASS and

zone should display

Alarm Memory - Last alarms only shows until system disarmed for the second time

Test Sensors - 4-Digit Code + 5 (TEST)

Keypad will beep every 3 minutes

Open sensors and keypad will sound

End test with 4-digit Code + 1 (OFF) key

Reset Smoke -4-digit code + 1 (OFF) twice to turn off siren and reset smoke

(If this does NOT reset smoke detector set for service, smoke is bad)

Door Chimes - 4-digit code + 9 (CHIME) CHIME should appear on keypad display