

Ademco 4140 XMP / First Alert 1200 C

Zones - 8 Hardwired, up to 64 with 5700 series Wireless or Hardwire Zone Expanders

Wireless - 5700 Series Receiver and Sensors only (Does not support 5800 Wireless)

Battery - 12 volt rechargeable Gel-Cell inside main panel
All wireless batteries are 9-volt Alkaline

Downloadable - Yes

Panic Buttons Police Panic - * and #
 Fire Panic - 1 and *
 Medical Panic - 3 and #

Status - Press * if keypad shows NOT READY to view open zones

Arm Away - 4-digit code + 2 key (AWAY)

Arm Stay - 4-digit code + 3 (STAY) to arm everything but motions

Quick-Arm - (If Enabled) Press # + 2 for AWAY, # + 3 for STAY

Instant Arm - 4-digit code + 7 (INSTANT), this also bypasses motions

Max Arming - 4-digit code + 4 (MAX), arms everything including motions instant

Disarm - 4-digit code + 1 (OFF)

Silence Alarm - 4-digit code + 1 (OFF) twice to turn off siren and reset display

Bypass - 4-digit code + 6 (BYPASS) + Zone (01, 02 03 etc)
(keypad will beep and BYPASS will display + zone bypassed)

Alarm Memory - There is no alarm memory

Reset Smoke - 4-digit code + 1 (OFF) twice to turn off siren and reset smoke (If this does NOT reset set for service, smoke is bad)

Door Chimes - 4-digit code + 9 (CHIME)

Keypad Help - Hold down any function key (AWAY, STAY etc) Alpha keypad will display help

Test Sensors - 4-Digit Code + 5 (TEST)

Keypad will beep every 3 minutes

Open sensors and keypad will sound

End test with 4-digit Code + 1 (OFF) key

(Wireless motions require no movement for 4 minutes prior to testing)

Setting Clock 1. Enter 4-digit code + #63

(Keypad shows current Clock settings, with ? showing current mode)

2. 6 changes from DAY/HOUR/MINUTE/MONTH/DATE/YEAR, 4 moves backwards

3. Press 3 or 1 to scroll value up and down

4. Press 8 to exit and save changes or * key to exit without saving

View Zones - Press * or 0 for 3 seconds, Descriptions will scroll, press
OFF to exit (This works only on 5137 Alpha Keypads)
