

Ademco 5140 XM / First Alert 1500 C

Zones - Up to 64 Hardwired zones

Wireless - No

Battery - 12 volt rechargeable Gel-Cell inside main panel
AC Transformer is 16.5 volts

Downloading - Yes

Panic Buttons Police Panic - * and #
 Fire Panic - 1 and *
 Medical Panic - 3 and #

Do not pause between keypresses with below commands or they will not work

Status - Press * if keypad shows NOT READY to view open zones

Arm Away - 4-digit code + 2 (AWAY) to arm everything

Arm Stay - 4-digit code + 3 (STAY) to arm all but motions

Quick-Arm (If Enabled) Press # + 2 for AWAY, # + 3 for STAY

Instant Arm - 4 digit code + 7 (INSTANT), this also bypasses motions (still gives exit delay)

Max Arming - 4-digit code + 4 (MAX) and everything arms instant (still gives exit delay)

Disarm - 4-digit code + 1 (OFF)

Silence Alarm - 4-digit code + 1 (OFF) twice to turn off siren and reset display

Bypass - 4-digit code + 6 (BYPASS) + zone (01, 02 03 etc)

Alarm Memory - 4-digit code + 0, 4-digit code + 1 key (OFF) to exit

Reset Smoke - 4-digit code + 1 (OFF) twice
(If this does NOT reset smoke detector set for service, smoke is bad)

Door Chimes - 4-digit code + 9 (CHIME)

Keypad Help - Hold down any key (AWAY, STAY etc) for 5 seconds to show that keys function

Setting Clock - 4-digit code + #63
6 moves from Hour to Minute to Month to Date to Year
4 moves backwards
Press 3 or 1 to change values
Press 8 to save and exit, press * to exit without saving

Fire Drill Test - Press # 69 to test Fire Alarm sirens
Press User code + 1 (OFF) to end

View Zones - Press and hold * key for 2 or 3 seconds, all Zone descriptions should scroll

Test Sensors - 4-Digit Code + 5 (TEST)

Keypad will beep every 3 minutes
Open sensors and keypad will sound
End test with 4-digit Code + 1 (OFF) key