

Ademco Vista 10 SE / First Alert 142 C

Zones - 6 Hardwired, up to 22 Wireless

Batteries - 12 volt rechargeable inside main panel, AC Transformer is 16 volts

Door/Windows 3- volt Lithium(Panasonic CR123A)
Motion Sensor 2 3-volt Lithium(Panasonic CR123A)
Smoke Detector 2 9-volt Alkaline
Remote Keypads 9 Volt Alkaline
Keyfobs 3-volt Lithium (CR2430 Hearing Aid type)
Remote Panics 3-volt Lithium (Panasonic CR123A)

Downloadable - Yes

Panic Buttons - Police Panic - * and #
Fire Panic - 1 and *
Medical Panic - 3 and #

Status - Press * if keypad shows NOT READY to view open zones

Arm AWAY - 4-digit code + 2 (AWAY)

Arm Stay - 4-digit code + 3 (STAY)

Disarm - 4 digit code + 1 (OFF)

Quick-Arm Press # + 2 for AWAY, # + 3 for STAY

Instant Arm - 4 digit code + 7 (INSTANT)

Max Arming - 4-digit code + 4 (MAX) to arm everything Instant

Silence Alarm - 4-digit code + 1 (OFF) twice to turn off siren and reset display

(If code is entered wrong, wait 2 or 3 seconds then try again)

Door Chimes - 4-digit code + 9 (CHIME)

Bypass - 4-digit code + 6 (BYPASS) + zone (01, 02 03 etc)

Alarm Memory - No alarm memory

Reset Smoke - 4-digit code + 1 (OFF) twice to turn off siren and reset smoke

(If this does NOT reset smoke detector set for service, smoke is bad)

Voice Keypads

Voice Chime # + 0 + 2 + 4 to Enable or Disable (Keypad should say "ON" or "OFF")

Show Status - # + 0 + *

Show Faults - Press **

Record 1. Press # + 0 + 1 (LED turns ON)

Message 2. Record message up to 2.5 minutes

3. Press 1 to end (LED begins FLASHING)

Play 1. Press # + 0 + 3

Message 2. Recorded message will play (LED turns OFF)

Adjust Volume - Press # + 0 + 2 then press 3 or 6 to raise or lower
Volume

Test Sensors - 4-Digit Code + 5 (TEST)

Keypad will beep every 3 minutes

Open sensors and keypad will sound

End test with 4-digit Code + 1 (OFF) key

(Wireless motions require no movement for 4 minutes prior to testing)

Activate Relay - 4-digit Code + # + 7

Deactivate Relay - 4-digit Code + # + 8

Pager Signals -Only available on Vista-10SE (not older Vista-10

Alarms -Account + 1911 + 3 digit Zone #

Openings -Account + 1001 + 3 digit User #

Closings - Account + 1002 + 3 digit User #

Trouble - Account + 1811 + 3 digit Zone #