

## Setting the Real-Time Clock

### In This Section

- ✦ General Information
- ✦ Setting the Time and Date

### General Information

This system provides a real-time clock, which must be set in order for the system's event log to keep track of events by time and date. It must also be set in order to execute scheduling programs (time-driven events).



Use a FA550KP alpha keypad to set the real-time clock, or set the clock via the downloader software. Only users with Installer or Master authority level can set the real-time clock.

### Setting the Time and Date

1. Enter installer or Master Code + # 63. Typical display shows:

TIME/DATE	—	THU
12:01 AM		01/01/90

2. The day of the week is automatically calculated based on the date entered. Time and date entries are made by simply entering the appropriate hour, minute, month, day and year.
  - Press [\*] to accept the entered value. The cursor then moves to the right.
  - Press [#] to move the cursor to the left of the display, to the previous position.
  - Enter the correct hour. Then press [\*] to move to the "minutes" field and make the correct entry.
  - Press [\*] again, then press any key 0-9 to set AM/PM. Press any key again to change AM to PM, or PM to AM.
  - Press [\*] to move cursor to the "month" field position and enter the correct month using a 2-digit entry.
  - Press [\*] and enter the correct date.
  - Press [\*] and enter the correct year.
3. Exit Clock Mode by pressing [\*] after the cursor is in the year position.